

Driver's Guide

D4505

2007 EPA Engine Tell-Tales

When you see this:



 
Regeneration Lamp (DPF) (Yellow)
Tell-tale illuminates when a regeneration is required. Tell-tale is OFF during regeneration.



High Exhaust Temperature Lamp (HET) (Yellow)
This Tell-tale will illuminate when the coach is moving less than 5 mph (approx.) and the exhaust outlet temperature exceeds the predetermined level.



Malfunction Indicator Lamp (MIL) (Red) (on DDC engines ONLY)
Malfunction Indicator Tell-tale Lamp. Tell-tale indicates a failure of an emission system component.



➔ Engine derated, regeneration required. Increase speed above 5 mph or perform stationary regeneration within 30 minutes.



➔ Engine derated or shut down engaged. Regeneration locked out. Service required. Contact authorized service center.

Driver Interaction

Do this:

➔ Regeneration is required within the next 5-6 hrs (if ON solid) or 1-2 hrs (if flashing). Drive the coach above 5 mph or perform stationary regeneration. Refer to the latest versions of MCI Service Bulletin 2963 for CAT C13, 2959 for Cummins ISM and 2964 for DDC S60 at www.mcicoach.com

➔ Nothing. Telltale is only active when coach is below 5 mph and in the regeneration process. When illuminated, the exhaust temperature is > 750° F (400° C). This telltale can be ON in conjunction with other telltales.

➔ Seek service from a Detroit Diesel service facility. Applicable to DDC Series 60 engines only.

MCI Sales and Service Centers

10 East Golf Road
Des Plaines, IL 60016 USA
(866) 624-2622

9787 Clifford Drive
Dallas, TX 75220 USA
(800) 248-4942

MCI Major Repair Center
520 North Spring Street
Loudonville, OH 44842
(877) 754-4404

14 Harmon Drive
Blackwood, NJ 08012 USA
(800) 262-1287

10850 Portal Drive
Los Alamitos, CA 90720 USA
(800) 777-4101

Parts
To order parts:
(800) 323-1238 (US)
(800) 665-0155 (Canada/ English)
(800) 546-3457 (Canada/Francais)



1400 Barre Street
Montreal, QC H3C 1N4 Canada
(800) 663-3328

1501 Albany Boulevard
Atlantic City, NJ 08401
(800) 263-1041

**Technical Support and
Emergency Roadside Assistance**
(800) 241-2947

3718 LB McLeod Road
Orlando, FL 32805 USA
(800) 390-0287

215 Maddox Simpson Parkway
Lebanon, TN 37090
(800) 927-5041

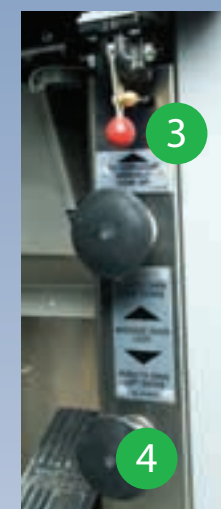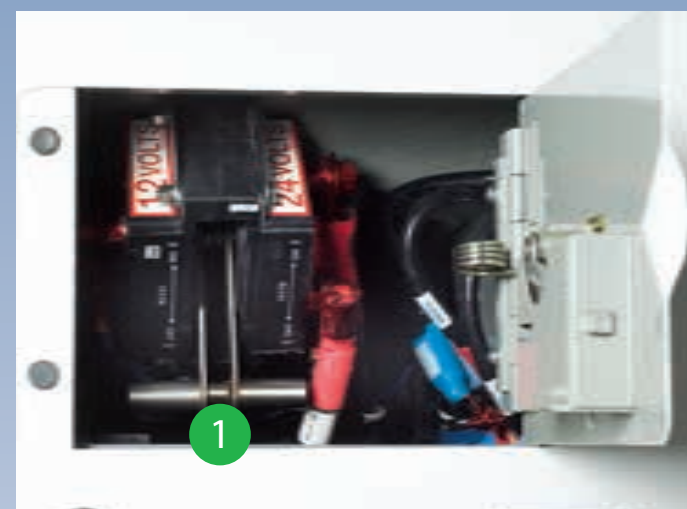

1. Main Battery Disconnect Switch
2. Exterior Entrance Door and Kneel Switch
3. Entrance Door Air Dump Valve Switch
4. Baggage Door Lock
5. Wheelchair Lift
6. Lift Control Pendant Switch
7. Horn/Foot Operated on Driver Footrest
8. Park Brake Valve on Lower, RH Console
9. Entertainment Controller and AM/FM CD Player
10. Regeneration Switch



MOTOR COACH
INDUSTRIES

Going further!

www.mcicoach.com



MOTOR COACH
INDUSTRIES

Effective with unit number 57956



Lower, LH Console

1. Mirror Control
2. Auxiliary Power
3. Rear Lift Switch
4. Driving Light Switch
5. 110 Volt Switch
6. Dzus Fastener Key
7. Reading Light Cover Removal Tool
8. Cup Holder
9. Parcel Rack Ventilation Switch
10. Mirror Heat Switch
11. Steering Axle Switch
12. Auxiliary Heat Switch
13. Automatic Transmission Pushbutton Shift Selector

2007 EPA Engine Code Retrieval–Speedometer Display



To navigate to the FAULTS screen on the speedometer alphanumeric display:

- Press the MODE button 5 times, to display the DIAGNOSTIC screen,
- Press the SET button 1 time, to display the AUTO screen,
- Press the MODE button 2 times, to display the FAULTS screen,
- Press the SET button 1 time, to display the Parameter Group Number (PGN) / “code” screen,
- Press the SET button 1 time, to display the SPN / Source screen,
- Press the SET button 1 time, to display the FMI screen.

Engine Code Example: 27 (4) – EGR Valve Position Circuit / Voltage Below Normal or Shorted to Low Source

Source Code: 0 (Engine) P (SPN): 27 (FMI): 4

Dashboard Controls

1. Stepwell Light Switch
2. Kneeling Switch
3. Entrance Door Open/Close Switch
4. Test/Reading Light Switch
5. Panel Illumination
6. Driver's Light Switch
7. Clearance/ID Light Switch.
8. Headlamps
9. Hazard/Warning Light Switch
10. Interior Light Switch
11. Front Entrance Light Switch
12. Engine Start Switch
13. Master Power Ignition Switch
14. Engine Override Switch
15. Engine Brake Switch
16. Fast Idle Switch
17. Mud/Snow Switch
18. Cruise Control Enable Switch
19. Set/Coast Resume/Accel Switch
20. Driver's Fan (Defrost)
21. Heating and A/C Control Panel
22. Turn Signal/Air Horn
23. Steering Column Adjustment
24. Entrance Door Air Dump Valve
25. Windshield Wipers and Washers
26. P.A. System
27. Baggage Door Locks
28. Vent
29. SmartTire SmartWave
30. Coolant Temperature Gauge
31. Oil Pressure Gauge
32. Voltmeter Gauge
33. Fuel Gauge
34. Front Air Pressure Gauge
35. Rear Air Pressure Gauge
36. Speedometer
37. Tell tales
38. Wheelchair Lift Master Switch (Optional/Not shown)
39. Horn
40. Instrument Panel



Effective with unit number 57956.

Vehicle specifications may change without notice.